

Buttons

The tag has 4 buttons, 2 on top and 2 on the bottom.

The smaller top buttons will be referred to as ● & ■




The larger bottom buttons will be referred to as ▼ & ▲
Please locate them on the tag as shown:




Modes


There are 4 mode to Dog-e-Tag™

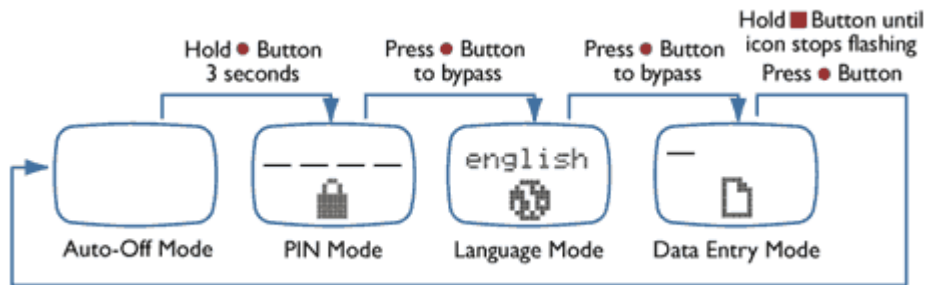

PIN Mode

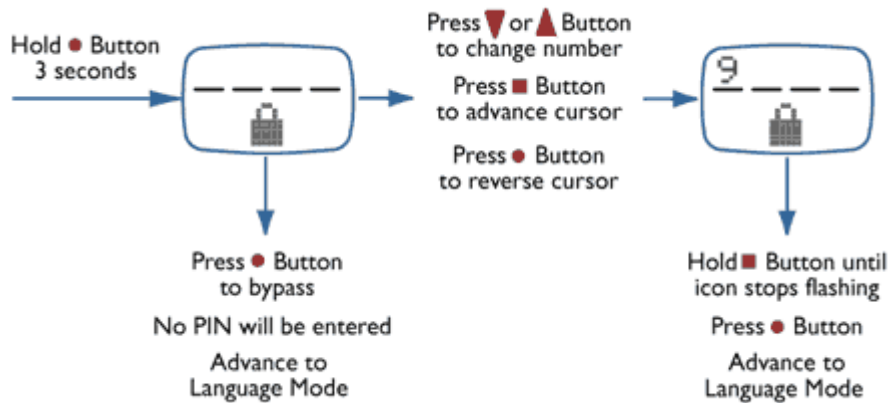

Language Mode

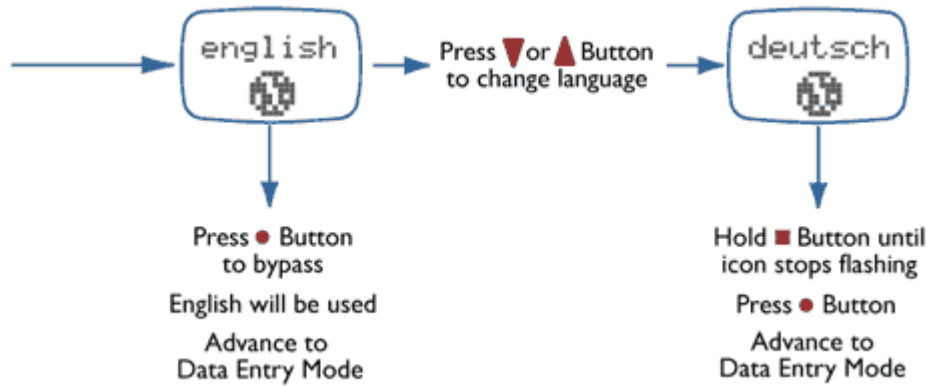

Programming Mode

